



Quick Reference Notes – **Daily Care**

簡易操作 - **日常保養**

Apeos C3567 / C3067 / C2567 / C2061

CONTENTS

目錄

1	Clear Paper Jam 夾紙排解.....	1
1.1	Duplex Automatic Document Feeder / 自動雙面送稿裝置	1
1.1.1	Document Feeder B2-PC (model Apeos C5571 / C4571)	1
1.1.2	Document Feeder C2-PC (model Apeos C7071 / C6571 / C5571 / C4571).....	3
1.2	Inside Upper Left Cover 左上蓋內部	5
1.2.1	Fusing Unit 熔著部.....	5
1.2.2	Center Tray Exit 中央承接盤輸出口	6
1.2.3	Duplex Unit 雙面元件.....	7
1.3	Inside Lower Left Cover 左下蓋內部	8
1.4	Standard Trays 標準紙盤	9
1.5	Tandem Trays 複合紙盤	10
1.6	Bypass Tray 手送紙盤	11
2	Replacing Toner 更換碳粉匣.....	12
2.1	Confirm Consumable Status 確認耗材狀態.....	12

Scan QR Code OR Click here for more instruction.

請掃描 QR Code 或者點擊這裡查看更多使用說明。

For more online support information please visit

更多相關資料，請訪問以下網址：

<https://support-fb.fujifilm.com>

 


1 CLEAR PAPER JAM 夾紙排解


1.1 DUPLEX AUTOMATIC DOCUMENT FEEDER / 自動雙面送稿裝置

1.1.1 Document Feeder B2-PC (model Apeos C5571 / C4571)


1. Remove all documents from the Document Tray. Pull up the front handle of the cover and open the cover until it stops.
1. 從原稿紙盤清除所有的原稿。提起護蓋前的把手，開啟護蓋直到停止位置。

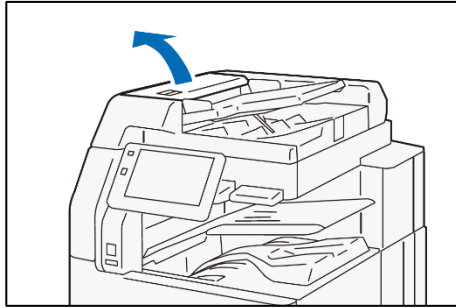

 2. Remove the document. Close the cover.
2. 清除原稿並關閉蓋子。

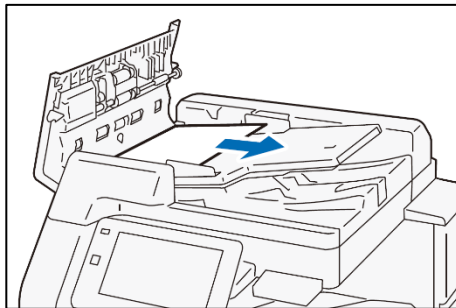


 3. If you cannot find the document, open the Document Cover, grip the handle to open the Side 2 scanner, and then remove the document. Close the Side 2 scanner, then close the Document Cover.
3. 找不到原稿時，打開原稿蓋，抓著拉桿，開啟反面掃描部，取出原稿。關上反面掃描部後，關閉原稿蓋。

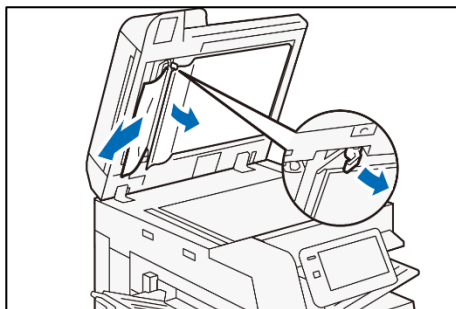

4. Lift the Document Feeder Tray and remove the document. Put the Document Feeder Tray back into position.

 
4. 提起送稿台，清除原稿。將送稿台回歸原位。

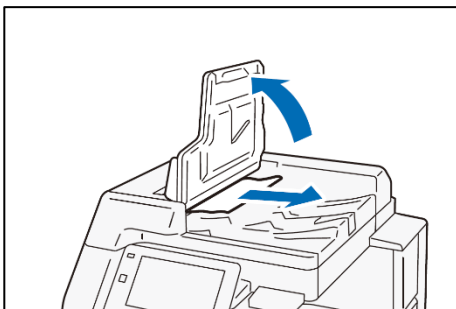

1.1.2 Document Feeder C2-PC (model Apeos C7071 / C6571 / C5571 / C4571)


1. Remove all documents from the Document Tray. Pull up the front handle of the Top Cover and open the cover until it stops.

 1. 從原稿紙盤清除所有的原稿。提起上蓋前的把手，開啟上蓋直到停止位置。

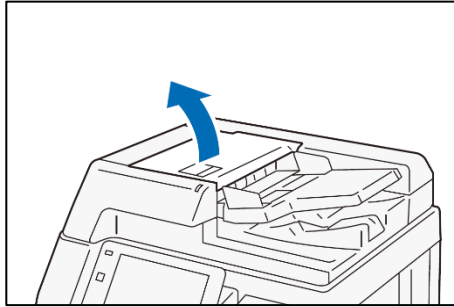


2. Open the Left Cover until it stops. Remove the document.

 2. 開啟左側蓋子直到停止位置。清除原稿。

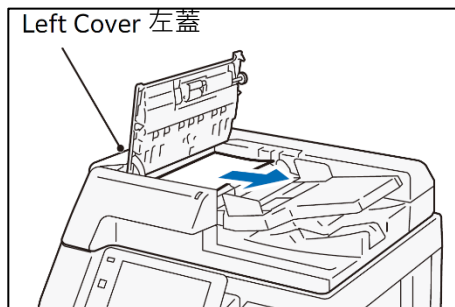


3. If the document is caught in the entry, remove the jammed paper from the Left Cover.

 
3. 原稿夾在吸入部時，可從左側蓋子進去清除原稿。

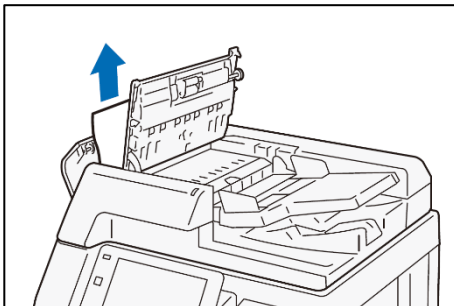

 4. If the document is caught in the exit area, lift the Document Feeder Tray and pull the document toward the exit.
4. 輸出口有原稿時，提起送稿台，朝輸出方向拉取出來。

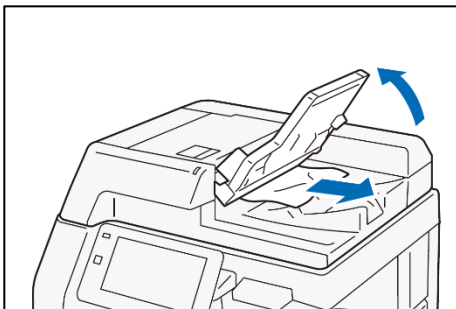

 5. Put the Document Feeder Tray back into position. Close the Upper Cover and the Left Cover.
5. 將送稿台回歸原位。關閉上蓋及左蓋。
6. Open the Document Cover, pull down the handle to open the Side 2 scanner, and then remove the document.
6. 打開原稿蓋，拉下拉桿，開啟反面掃描部，取出原稿。

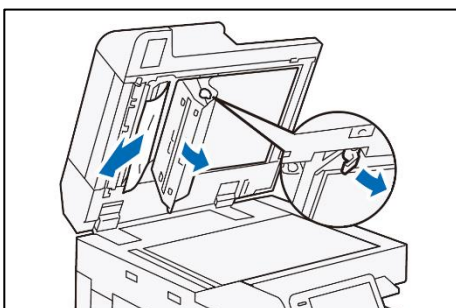


7. Close the Side 2 scanner, then close the Document Cover.
7. 關上反面掃描部後，關閉原稿蓋。


1.2 INSIDE UPPER LEFT COVER 左上蓋內部

1.2.1 Fusing Unit 熔著部

 
1. While lifting up the Release Handle, open the Upper Left Cover.
1. 提起釋放拉桿，開啟左上蓋。

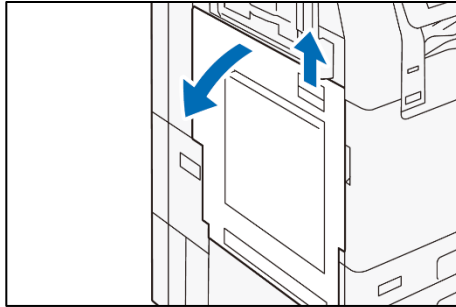

 
2. Remove the jammed paper.
2. 清除卡住的紙張。

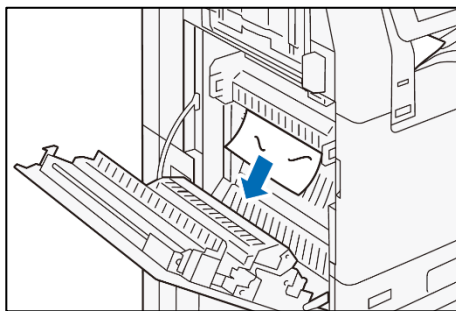

 3. Pull the handle [A1].
3. 拉出拉桿【A1】。

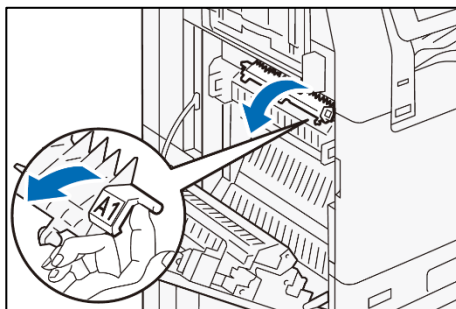

 4. Remove the jammed paper.
4. 清除卡住的紙張。

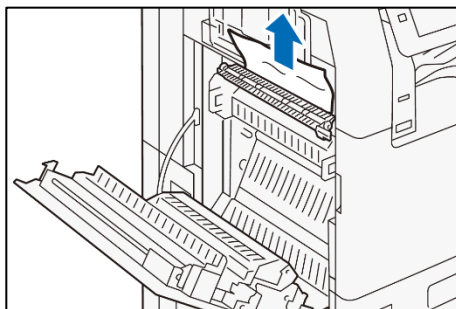


5. Return the handle [A1] to the original position. Close the Upper Left Cover.
5. 將拉桿【A1】放回原位，並關閉左上蓋。

1.2.2 Center Tray Exit 中央承接盤輸出口


1. While lifting up the Release Handle, open the Upper Left Cover.

 1. 提起釋放拉桿，開啟左上蓋。

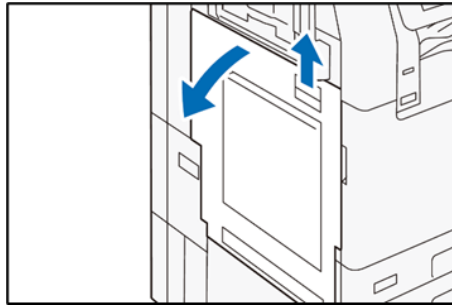


2. Pull the handle [A2].

 2. 拉出拉桿【A2】。

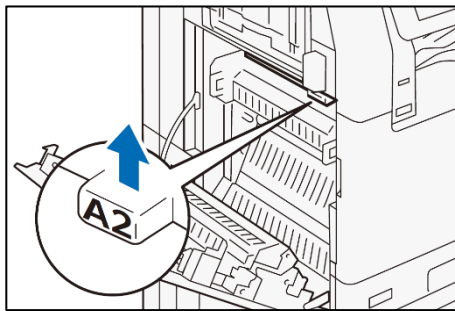

3. While holding the handle [A2], remove the jammed paper.

 3. 抓著拉桿【A2】，清除卡住的紙張。

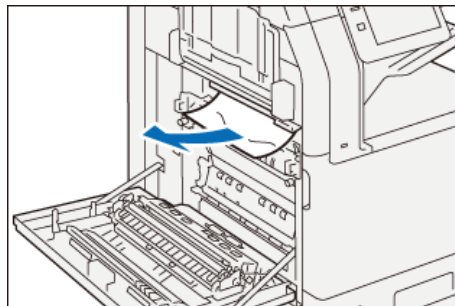


4. Return the handle [A2] to the original position. Close the Upper Left Cover.

4. 將拉桿【A2】放回原位，並關閉左上蓋。

1.2.3 Duplex Unit 雙面元件


1. While lifting up the release handle, open the upper left-side door.

 1. 提起釋放拉桿，開啟左上蓋。

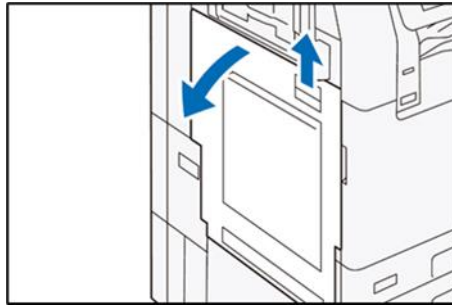


2. Remove the jammed paper.

 2. 清除卡住的紙張。

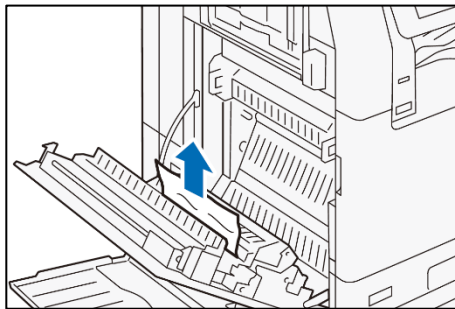


3. Pull the handle [A3].

 3. 拉出拉桿【A3】。

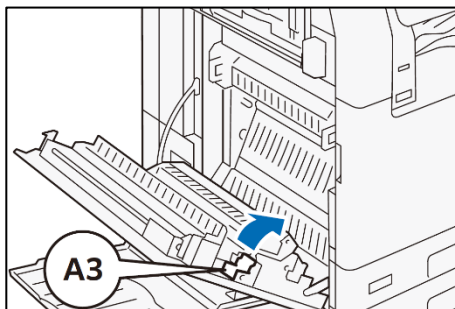

4. While holding the handle [A3], remove the jammed paper.

 4. 抓著拉桿【A3】，清除卡住的紙張。

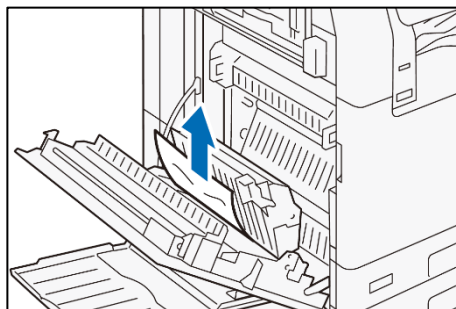


5. Return the handle [A3] to the original position. Close the Upper Left Cover.

5. 將拉桿【A3】放回原位，並關閉左上蓋。

1.3 INSIDE LOWER LEFT COVER 左下蓋內部


1. Open the Lower Left Cover.

 1. 打開左下蓋

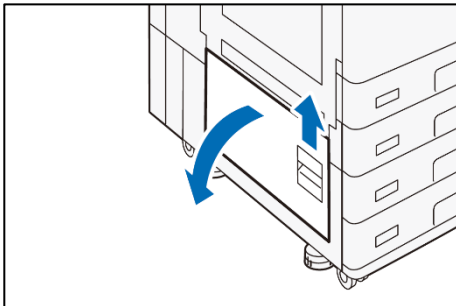

2. Remove any jammed paper.

 2. 清除卡住的紙張。

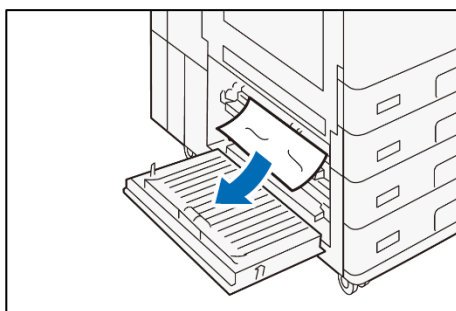


3. Close the Lower Left Cover.

3. 關閉左下蓋。

1.4 STANDARD TRAYS 標準紙盤


1. Pull out the Paper Tray where the paper jam occurred until it stops.

 1. 將發生卡紙的紙盤完全拉出。

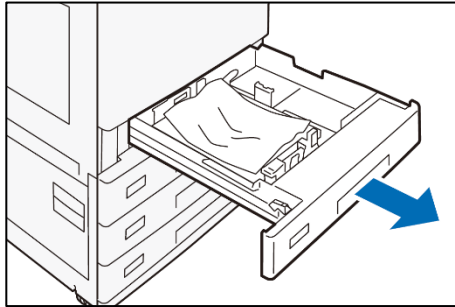

2. Remove any jammed paper.

 2. 清除卡住的紙張。

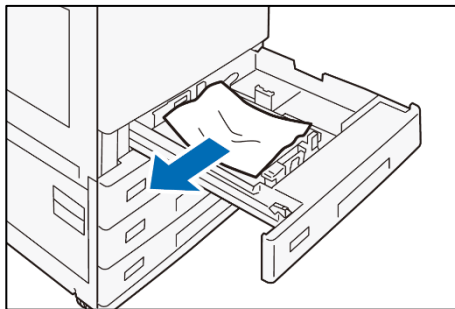


3. Push in the paper tray.

3. 推回紙盤。

1.5 TANDEM TRAYS 複合紙盤


1. Pull out the Paper Tray where the paper jam occurred until it stops.

 1. 將發生卡紙的紙盤完全拉出。

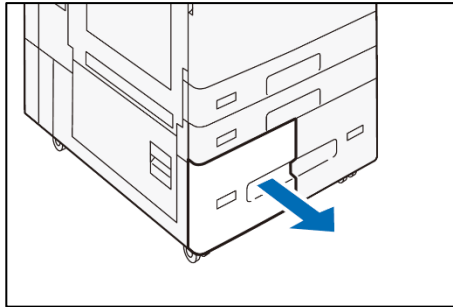


2. Remove the jammed paper.

 2. 清除卡住的紙張。

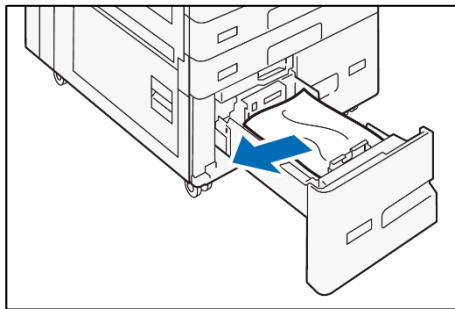


3. If paper is jammed in the paper feed section, pull out [C].

 3. 紙張輸送部上有卡紙情況時，拉開[C]。

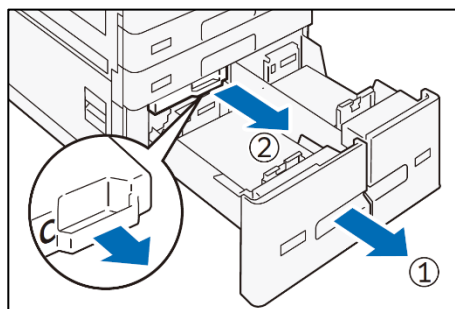

4. Open the cover and remove the jammed paper.

 4. 打開護蓋，清除紙張。

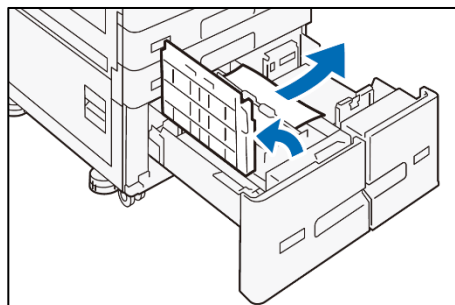


5. Close the cover and push in the Paper Tray.

5. 關閉護蓋，推入紙盤。

1.6 BYPASS TRAY 手送紙盤

1. Remove any jammed paper.

 
1. 清除卡住的紙張。

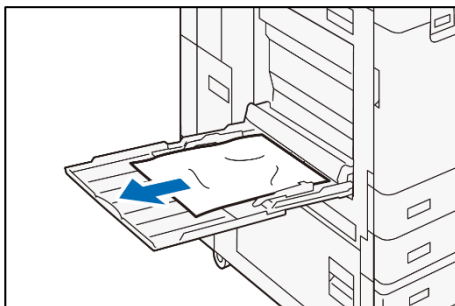


2 REPLACING TONER 更換碳粉匣

2.1 CONFIRM CONSUMABLE STATUS 確認耗材狀態


 
1. Tap .

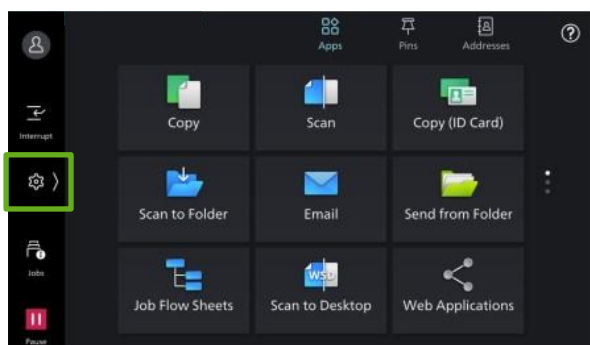

 2. Tap [Device Status].

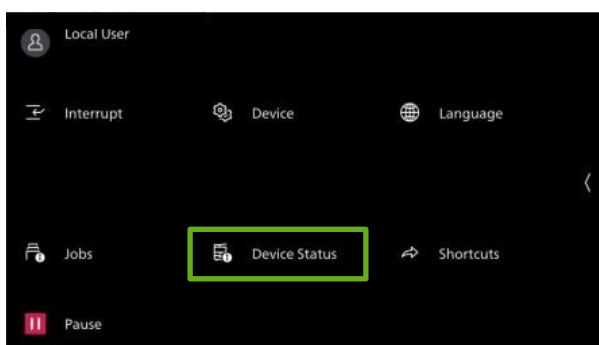

  3. Tap [Supplies].

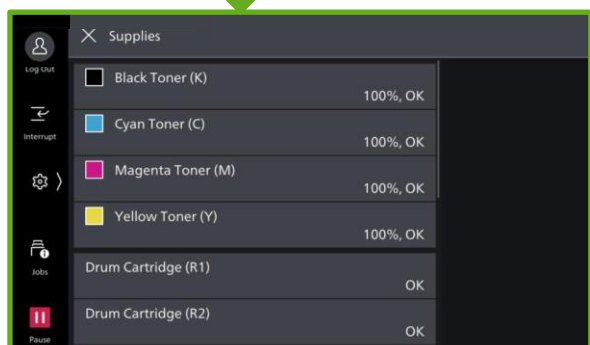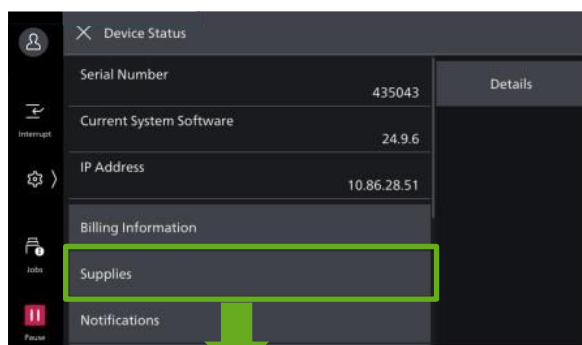

4. For the replacement method, refer to the steps provided on the consumable box.

1. 點選 。



2. 點選【機器確認 (碼錶確認)】。



3. 點選【耗材確認】。



4. 更換的方法請參考耗材外盒上所記載的步驟。

Customer Support Center

2513-2513